



## Mold Making Materials

### Choosing the right Mold Material

## How to use TAP Premium Liquid Latex Rubber

- Bubble-Free Surface
- Excellent Tear Resistance
- Fine Detail Reproduction
- Economical
- Easy to Use



### TAP's Mold Making Rubbers...

- **Premium Liquid Latex Rubber** (see Product Bulletin 6)
- **Silicone RTV** (see Product Bulletin 8)
- **Urethane RTV System** (see Product Bulletin 7)
- **Platinum Silicone** (see Technical Data Sheet)

Our Mold-Making Rubbers let you reproduce most any surface or shape, regardless of size or amount of detail. Your model remains intact and your finished mold is durable, reusable, and economical. If mold-making is a new experience, it is best to familiarize yourself with the product by first making small molds and castings.

### Glove Molds with Liquid Latex Rubber

1. **Prepare Model...** preparation depends on porosity of the model and amount of detail desired. Latex rubber will enter minute crevices and penetrate porous surfaces. If mold release is not used, the mold will be difficult or impossible to remove from the model. TAP offers a number of different releases.



figure A

Most projects require releases for both the pattern and the mold. Test for compatibility by using small samples of the materials you will be using for your project.

For porous surfaces a good release is **TAP Wax Mold Release**. Apply it with a soft, short-bristled brush and then remove excess wax with a stiff brush. Keep brush dry by wiping it with a cloth. Polish smooth areas with your hands or a soft rag. If applied properly, TAP Wax Mold Release will not leave residue or hide detail. Latex can be applied approximately five minutes after mold release dries. Non porous surfaces usually do not need a release. However, it is always best to test a small inconspicuous area first. TAP Wax Mold Release can be used if needed.

2. **Determine Base of Model** (bottom of mold)... attach model securely to a solid base (acrylic works well). Use a caulking material or Plasticene Modeling Clay to fill cracks and openings around the base and bottom of model. This prevents the mold material from seeping under the model. The bottom (base) of the model becomes the fill-opening of the mold. The back side of a plaque is its fill opening.

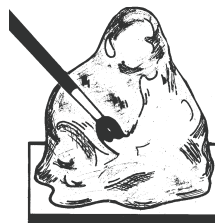


figure B

3. **Apply...** brush a thin coat of Liquid Latex Rubber on the model, making sure that any air bubbles are popped... (figure-B). Avoid build up in crevices that will require extra drying time. Brush Liquid Latex Rubber in a continuous film onto the base surface, forming a 2" flange around the base of the model. This flange will support the mold during casting.

4. **Allow** coating to dry completely until ALL traces of white are gone and the coating appears to be translucent. Repeat for successive layers, allowing each to dry. If elongation is not necessary, gauze may be added in strips for reinforcement and as a reduction to the number of coats required. Do not allow more than 24 hours between coats.

### Brush It On!

- Glove Molds
- Blanket Molds

The average model will require 8 to 10 coats of Liquid Latex. Clean the brush with soap and water between coats. Before removing the mold, allow it to cure 24 hours after applying the last coat.

5. **Make A Casting...** after removing the mold from the model (see TAP Tips), apply a mold release to the inside of the mold to prevent the casting material from sticking to the mold. Suspend the mold by its flange, using a properly sized hole cut in a cardboard box as a support. Use masking tape to hold the flange to the cardboard. Carefully pour the casting medium into the mold, being careful not to trap bubbles. Experiment with a small mold before attempting any major project.

### Blanket Molds

A plaque-type model with a high-relief design usually requires a Blanket Mold. This method uses less mold material than would a plaque mold. (Described in Product Bulletin 8)

1. **Prepare Model...** attach model to base and prepare surface as explained in Step 2-Plaque Molds... (figure-C).

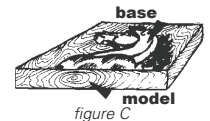


figure C




figure D

2. **Mix • Apply...** follow steps 3 and 4 for Glove Molds (figure-D). Allow to cure.

3. **Make A Back-Up Mold...** because a latex of this type is so flexible, it will not hold its mold shape for casting when laid on a surface. Therefore, some kind of rigid backup mold is required. Construct a container around the sides of the base to hold the backup mold... (figure-E). Coat the exposed surface of the cured blanket mold with petroleum jelly (Vaseline) or use PolEase 2300. This will prevent the backup mold from adhering to the blanket mold. The base container must be on a level surface before casting. Use plaster of Paris, concrete, fiberglass, or similar medium to make the backup mold. If its weight will be restrictive, then use TAP's X-30 Polyurethane Foam. X-30 is not only light weight (two pounds per cubic foot) but it also provides the rigidity required of a backup mold. Allow the backup mold to cure. Remove sides of container and separate the backup mold from the Blanket Mold. Peel the Blanket Mold from the model. Insert Blanket Mold into backup mold and pour with desired casting medium. (figure-F).

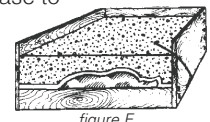


figure E



figure F

## TAP Tips for Using Liquid Latex Rubber

1. Make your brush easy to clean by dipping in soapy water and squeezing out excess before starting project.
2. Break bubbles on surface by blowing on them through a straw while latex is wet.
3. Do not apply successive coats until previous coat is completely dry and all traces of white have disappeared. Thin coats will dry much quicker.
4. Do not wait more than 24 hours between fully dried coats. Latex does not stick to itself once it cures.
5. Lubricate the outside of a glove mold with hand cream to make it easy to peel off model.
6. Store dry molds individually in a clean plastic bag.
7. Speed drying time with warm room temperature and moving air or a hair dryer.
8. One quart will yield a mold about 12" x 16" x .16".

## TAP Tips for Using Casting Mediums

TAP Premium Liquid Latex Rubber is compatible with any of the casting materials stocked in our stores. It is also excellent for casting plaster, cement, and molten wax, none of which require a release agent. When casting plaster, coat the mold with 1% detergent solution, such as, Ivory Liquid Detergent (do not use soap), to reduce surface air bubbles in the plaster. After first few castings, release becomes easier.

Even though polyester resin does not require a release agent, the use of one is recommended as it increases the life of the mold and eases the cast part out of the mold. Epoxy and Quik-Cast both require a release agent (TAP's Pol-Ease 2300 is ideal). Fillers can be used with polyester, epoxy, and Quik-Cast to produce incredible effects and dramatically reduce cost.

Remove the cast part from the mold as soon as possible to prevent mold degradation from heat and chemical migration.

## Applications for Different Casting Media

There are numerous moulding applications for TAP Molding Materials, here we will only mention a few of them, classed according to the type of material molded.

<i>Examples of use</i>	<i>Material</i>
Furnishing Figurines Frames – mirrors – paintings Buttons Paleontology Reproduction of old objects	<b>POLYESTER</b>
Furnishings Prototypes Interior car trim Cornices – roses	<b>POLYURETHANE</b>
Master prototype models Production of tooling Reproduction of statuettes	<b>EPOXIES</b>
Prefabrication Decoration	<b>CONCRETE</b>
Figurines Master moulds for tiles	<b>PLASTER</b>
Decorative candles Jewelry (lost wax process)	<b>WAX-PARAFFIN</b>
Fancy jewelry Prototypes Small production runs decorative items	<b>LOW MELT ALLOYS</b>

## WARNING

KEEP OUT OF REACH OF CHILDREN. Avoid breathing vapors. Exposure to mist or spray may cause coughing, sneezing, or other symptoms of upper respiratory tract irritation. Skin: Wash with large amount of soap and water. Eye: Immediately flush with water for at least 15 minutes. Consult a physician if irritation develops or persists. Ingestion: May cause irritation to mucous membranes of mouth, throat, esophagus, and stomach.

View all of TAP's how-to videos on plastic, fiberglass, mold-making, window films, and more at:

[http://www.tapplastics.com/product\\_info/videos](http://www.tapplastics.com/product_info/videos)

## TAP Plastics

<input type="checkbox"/> <b>Bellevue WA</b>	12021 NE Northup Way	425 861-0940
<input type="checkbox"/> <b>El Cerrito CA</b>	10760 San Pablo Avenue	510 778-9057
<input type="checkbox"/> <b>Fremont CA</b>	5160 Mowry Avenue	510 796-3550
<input type="checkbox"/> <b>Lynnwood WA</b>	4232 196th St. SW	425 977-4440
<input type="checkbox"/> <b>Mountain View CA</b>	312 Castro Street	650 962-8430
<input type="checkbox"/> <b>Pleasant Hill CA</b>	1478 Contra Costa Blvd	925 798-0420
<input type="checkbox"/> <b>Pleasanton CA</b>	6010-C Johnson Drive	925 460-8214
<input type="checkbox"/> <b>Portland OR</b>	2842 NE Sandy Blvd	503 230-0770
<input type="checkbox"/> <b>Sacramento CA</b>	4538 Auburn Blvd	916 481-7584
<input type="checkbox"/> <b>Sacramento CA</b>	4506 Florin Road	916 429-9551
<input type="checkbox"/> <b>San Francisco CA</b>	154 S. Van Ness Ave	415 864-7360
<input type="checkbox"/> <b>San Jose CA</b>	1212 The Alameda	408 292-8685
<input type="checkbox"/> <b>San Leandro CA</b>	3011 Alvarado Street	510 357-3755
<input type="checkbox"/> <b>San Mateo CA</b>	606 South B Street	650 344-7127
<input type="checkbox"/> <b>San Rafael CA</b>	900 Andersen Drive	415 454-6393
<input type="checkbox"/> <b>Santa Rosa CA</b>	2770 B Santa Rosa Ave	707 544-5772
<input type="checkbox"/> <b>Seattle WA</b>	710 9th Avenue North	206 389-5900
<input type="checkbox"/> <b>Stockton CA</b>	1859 Pacific Avenue	209 937-9300
<input type="checkbox"/> <b>Tigard OR</b>	15957 SW 72nd Avenue	503 620-4960

Printed on recycled paper.

Revised January 2018



Corporate Office • San Leandro CA • (510) 895-8249

the fantastic plastic place