

Working with ® ACRYLIC SHEET

Contents

Introduction	1
Characteristics of ACRYLITE® acrylic sheet	2
Cleaning	3
Masking	4
Some general hints	5
Cutting ACRYLITE acrylic sheet	6
Cutting with a knife or scriber	6
Cutting with power saws	7
Cutting with hand saws	8
Routing and shaping	9
Turning	
Drilling ACRYLITE acrylic sheet1	
Finishing ACRYLITE acrylic sheet1	

Scraping	11
Filing	11
Sanding	12
Polishing	
Forming ACRYLITE acrylic sheet	15
Forming with a strip heater	15
Other forming techniques	17
Joining ACRYLITE acrylic sheet	
Preparation of the joint	18
Capillary cementing	19
Dip or soak cementing	
Viscous cementing	
Glazing with ACRYLITE acrylic sheet	

Do it with Acrylite.

ACRYLITE acrylic sheet. . . CYRO Industries' acrylic sheet. . . is a remarkably versatile material. It is strong, lightweight, and transparent. Use it to replace glass in windows and partitions. It can be colored, textured, and is easy to work with—a designer's or hobbyist's delight.

Work with it. Get to know it. Be creative. And don't restrict yourself to other people's designs. Your new use may be the best use yet.

ACRYLITE acrylic sheet is offered in several versions: ACRYLITE GP® cell cast acrylic sheet is available in more than 200 colors, thicknesses ranging from 0.060" to 2.0" (1.5 mm to 48 mm) and in sheet sizes from 36" x 48" (900 mm x 1200 mm) to 72" x 120" (1800 mm x 3000 mm).

ACRYLITE FF[®] acrylic sheet is available in colorless, bronze shades, opaque colors, sign colors and textures; in thicknesses ranging from 0.050" to 1" (1.25 mm to 24 mm) and in sheet sizes up to 75" x 100" (1900 mm x 2540 mm). Larger sizes available upon request.

ACRYLITE® AR and ACRYLITE® GAR acrylic

sheet offer the excellent optical quality and ease of fabrication inherent in ACRYLITE acrylic sheet with the added benefit of an abrasion and chemical resistant coating on one or both sides.

Working with ACRYLITE acrylic sheet is easy and fun—no more difficult than wood, and a lot more versatile. Learn a few simple techniques, and you can turn out work that would please the most demanding professional. This booklet will tell you how.

First... get to know your material

ACRYLITE acrylic sheet is a high quality plastic. Its properties have led to its wide use as a replacement for glass.

ACRYLITE acrylic sheet is:

Lightweight: half the weight of glass.

Break resistant: withstands many times the impact force of glass of similar thickness.

Weather resistant: virtually unaffected by sun, extreme cold, salt water spray.

Heat resistant: ACRYLITE GP acrylic sheet takes a range of temperatures from -30°F (-34°C) to +200°F (93°C), though it may be affected by continuous temperatures in the 180°-200°F (82° -93°C) range. ACRYLITE FF acrylic sheet can be used at temperatures from -30°F (-34°C) up to +190°F (88° C). It is recommended that temperatures not exceed 160°F (71°C) for continuous service, or 190°F (88° C) for short intermittent use.

Colorfast: the color is continuous throughout the material. Colored acrylic sheets are known for their outstanding durability.

Easy to work with... we're going to tell you how.

Characteristics of ACRYLITE acrylic sheet

ACRYLITE acrylic sheet behaves differently from other types of material. Learn what it can do. . . and what it can't. Learn how to care for it. You'll be sure to get the best results.

Expansion and contraction: Like most plastics, ACRYLITE acrylic sheet responds to temperature changes by expanding or contracting at a far greater rate than glass. When using ACRYLITE acrylic sheet for outdoor glazing, cut the sheet approximately 1/16" per running foot (or 0.5 cm per running meter) shorter than the frame size.

Flexibility: ACRYLITE acrylic sheet is much more flexible than glass or many other building materials. When using large sheets for windows, it is important that rabbets or channels be deep enough to provide support against high winds (see page 22, "Glazing with ACRYLITE").

Electrical Properties: ACRYLITE acrylic sheet is an excellent insulator. Its surface resistively is higher than that of most plastics. Continuous outdoor exposure has little effect on its electrical properties.

Chemical Resistance: ACRYLITE acrylic sheet has excellent resistance to attack by many chemicals. It is affected, in varying degrees, by benzene, toluene, carbon tetrachloride, ethyl and methyl alcohol, lacquer thinners, ethers, ketones and esters. ACRYLITE acrylic sheet is not affected by most foods, nor are foods affected by it.

ACRYLITE AR and ACRYLITE GAR abrasion resistant acrylic sheet can withstand certain chemicals which come in contact with the coated side. The following table shows how the coating offers better protection against certain chemicals.

CHEMICAL RESISTANCE

Chemical	ACRYLITE FF sheet	ACRYLITE AR sheet
Acetone	< 15 min	> 24 hrs
Ethylene Dichloride	< 15 min	> 24 hrs
Gasoline	> 24 hrs	> 24 hrs
Hydrochloric Acid	> 24 hrs	> 24 hrs
Methyl Alcohol	> 24 hrs	> 24 hrs
Methylene Chloride	< 15 min	> 24 hrs
Methyl Ethyl Ketone	e > 15 min	> 24 hrs
Nitric Acid	< 15 min	< 24 hrs
Sodium Hydroxide	< 24 hrs	> 24 hrs
Sulfuric Acid	< 15 min	> 24hrs
Toluene	< 15 min	> 24 hrs
Isopropanol	> 24 hrs	> 24 hrs
Kerosene	> 24 hrs	> 24 hrs

Testing for resistance to the above chemicals was conducted per ASTM D 1308. Time intervals for visually inspecting the sheet surface; 15 minutes, 1 hour and 24 hours. The table shows the time it took the chemical to visually attack the surface. Light Transmission: Colorless ACRYLITE acrylic sheet has a light transmittance of 92%, which is greater than glass. Translucent white ACRYLITE sheet diffuses light smoothly and evenly, so it's excellent for all types of lighting fixtures and signs. ACRYLITE sheet is also available in a large variety of transparent, translucent and opaque colors.

Fire Precaution: ACRYLITE acrylic sheet is a combustible thermoplastic. The self-ignition temperature range is 830-910°F. Protect it from flames and high heat. Refer to page 24 for further information.

Cleaning: Wash ACRYLITE sheet with a mild soap or detergent and plenty of lukewarm water. Use a clean soft cloth, applying only light pressure. Rinse with clear water and dry by blotting with a damp cloth or chamois.

Grease, oil or tar may be removed with a good grade of hexane, aliphatic naphtha, or kerosene. These solvents may be obtained at a paint or hardware store and should be used in accordance with manufacturers' recommendations.

Any oily film left behind by solvents should be removed immediately by washing.

Do Not Use: Window cleaning sprays, kitchen cleansers, gasoline, benzene, carbon tetrachloride or lacquer thinner.

A liquid detergent and water solution is recommended to clean ACRYLITE AR and ACRYLITE GAR acrylic sheet. However, the following brand name cleaners have been tested and found to work well on the coated surfaces. Use care when cleaning since some of these cleaners may attack the uncoated sides or edges of the sheet.

Fantastik household cleaner Formula 409 household cleaner Mr. Clean household cleaner Glass Plus cleaner Top Job household cleaner Windex window cleaner

Static electricity can attract dust to ACRYLITE acrylic sheet. To reduce it, use an anti-static cleaner which is available from your dealer. Or consider using a de-ionizing air gun.

Masking: ACRYLITE GP acrylic sheet comes covered on both sides with a latex paper masking. ACRYLITE FF acrylic sheet comes covered with either latex paper or polyethylene film masking. ACRYLITE AR and ACRYLITE GAR abrasion resistant acrylic sheet is available with latex paper masking. For all sheet types, the masking protects the sheet from scratching during storage and handling. **Be sure to** *leave the masking in place during most phases of fabrication and installation.* Except for intricate detail work, you should remove the masking only when your project is completed.

You can remove the masking paper with a cardboard tube—rolling the paper around it. All masked ACRYLITE sheet should be kept away from heat and sunlight, and masking should be removed soon after installation. If the adhesive has hardened, moistening the paper with aliphatic naphtha, hexane, or kerosene will help soften it. Never use a knife or scraper to remove masking.



Roll the masking paper onto a

cardboard tube

Acrus.

Roll the masking paper back about %" to allow work on the edges of the sheet.

It's as easy as working with wood when you're working with ACTUILE

Some general hints:

Do's

- Keep masking on as long as possible through your fabrication operations.
- Wear safety glasses when working with power tools.
- Wear gloves when handling large sheets to prevent cuts.
- Use drill bits which are designed or reground for acrylics and carbide tipped circular sawblades and router bits.
- Make sure all your tools are sharp.
- Use water as a coolant when cutting sheets over 1/4" (6.0 mm) thick or drilling sheets over 3/16"(4.5 mm) thick.
- Use the right thickness for glazing panels and ensure there is sufficient rabbet depth to permit sheet deflection and thermal contraction without disengagement.
- Allow 1/16" per linear foot (0.5 cm per linear meter) for expansion in glazing applications.
- Use plenty of water when cleaning ACRYLITE sheet to help prevent scratching.
- Ask your ACRYLITE acrylic sheet distributor for detailed information.

Don'ts

- Don't store ACRYLITE acrylic sheet near radiators or steam pipes or in direct sunlight.
- Don't leave masking on if it will be exposed to the outdoors (sun or rain).
- Don't install large sheets with bolts. . . frame them.
- Don't mark with a punch marker.
- Don't use sawblades that have side-set teeth. Saw teeth should be carbide tipped with 0°-15° rake and slight radial clearance.
- Don't bring the material in direct contact with heaters.
- Don't subject the sheet to high surface temperatures during polishing.
- Don't use glass cleaning sprays, scouring compounds or solvents like acetone, gasoline, benzene, carbon tetrachloride, or lacquer thinner.
- Don't heat ACRYLITE acrylic sheet in a kitchen oven.



ACRYLITE acrylic sheet can be sectioned in a wide variety of ways, with either hand tools or power tools. The method you choose will likely depend on the particular tools available to you, but all tools cannot be used in all cases. Your choice of tool and techniques should be based on the type of acrylic sheet used, the thickness of the sheet, and the shape of the particular cut. This section, though not comprehensive, gives some guidelines for choosing the right tool, and using it properly to get the best results with ACRYLITE acrylic sheet.

Cutting with a knife or scriber

ACRYLITE acrylic sheet up to 3/16" (4.5 mm) thick may be cut by a method similar to that used for cutting window glass. Use a scriber of some kind—a scribing knife such as the one pictured, a metal scriber, an awl, or even a sturdy craft knife—to score the sheet. Draw the scriber several times [7 or 8 times for a 3/16" (4.5 mm) thick piece] along a straight edge held firmly in place. It is best not to remove the protective masking. Make the cuts carefully using firm,

even pressure. For best results, make each stroke cleanly off the edge of the sheet.

Then, clamp the ACRYLITE acrylic sheet or hold it rigidly under a straight edge with the scribe mark hanging just over the edge of a table. Protect your hands with a cloth, and apply a sharp downward pressure to the other side of the sheet. It will break along the scratch. Scrape the edges to smooth any sharp corners. This method is not recommended for long breaks or thick material.





Always draw the scribing knife along a straight edge.

Break sheet over edge of table atter scribing.

Cutting with power saws


CAUTION! Wear safety glasses when working with power tools.


With any type saw, blades should be sharp, and free from nicks and burrs. Special blades for cutting acrylics are available for most types of saws. Your authorized ACRYLITE acrylic sheet distributor should have them in stock. Otherwise, use carbide-tipped blades designed for cutting plastics available at industrial products suppliers like Sears. Teeth should be fine, of the same height, evenly spaced, with little or no set.

Table saws and circular handsaws: Use hollow ground, high-speed blades with no set, and at least 5 teeth per inch (25 mm), such as those used to cut copper and aluminum. If you intend to do a lot of cutting use carbide-tipped blades designed for plastics (a triple chip type tooth design is recommended). These give a cleaner cut in acrylic sheet. Set the blade to project approximately 1/8" (3 mm) above the surface of the sheet being cut. This will reduce edge chipping.

When cutting with a hand-held circular saw, clamp the sheet securely to the work surface to minimize vibration. A wood block 1" x 3" (25 x 75 mm) clamped on top of the sheet spreads the clamping force and can act as a guide for the saw.

No matter which type of saw you use, the sheet must be held firmly and fed slowly and smoothly to prevent chipping. Be sure the saw is up to full speed before beginning to cut. Water-cooling the blade is suggested for thicknesses over 1/4" (6 mm), especially when edge cementing will be performed.

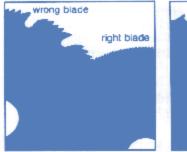

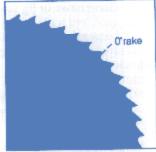

For circular saws, use a metal cutting blade—not a combination blade.

Teeth should be ground on the center line, and have 0° rake.

Saber saws: Use blades which have a slight set, such as the blades recommended for cutting metals or other plastics. Be sure they are sharp. The blades you use for cutting acrylic should never be used to cut other materials. Set them aside. Use them only for acrylic sheet.

High speed is best for cutting ACRYLITE acrylic sheet with a saber saw. Always be sure the saw is at full speed before beginning to cut. Press the sawshoe firmly against the material, and don't feed too fast. Water cooling is suggested for cutting acrylic sheet over 1/4" (6 mm) thick.

Band saws or jig saws: Band saws and jig saws are excellent tools for cutting ACRYLITE acrylic sheet. But because of their relatively thin blades, they are not recommended for cutting acrylic sheet over 1/4" (6 mm) thick. Use blades with a slight set, and about 10 teeth per inch (25 mm). Feed acrylic sheet at a rate 10 times faster than you would feed steel. Blades may break easily in acrylic, so operate accordingly.


Cutting with hand saws

ACRYLITE acrylic sheet may be cut with almost any type of hand saw. And while good results are

possible with hand saws, the techniques involved are considerably more difficult than with power saws. Practice on scrap material before attempting to make critical cuts.

With any hand saw, it is most important that the blades be kept sharp. For best results, the teeth should be of uniform size and shape, and have very little set.

Every effort should be made to prevent vibration or stress while cutting. Flexing at the point of the cut or binding of the saw blade may cause the acrylic to crack. Clamp the material securely. Keep the saw straight when cutting, and apply very little pressure.

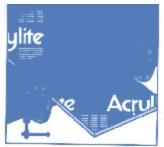



Clamp sheet firmly to table before cutting with a saber saw.

Use clamping strip as a guide for the saw.

Let the blade do the work. With practice and proper care, you can get good results.

Straight saws: Straight saws, or cross-cut saws may be used for long, straight cuts on ACRYLITE acrylic sheet of almost any thickness. The saw should have a hollow-ground blade with very little set and at least 10 teeth per inch (25 mm). Make certain the material is firmly clamped and supported. Hold the saw at an angle of about 45° from vertical, and be sure to keep it straight.

Coping saws: Coping saws or scroll saws are good for shorter cuts, curved cuts, or even intricate designs. Use very narrow blades with only a slight set.

Hacksaws: These hand saws for cutting metal may also be used for short cuts in ACRYLITE acrylic sheet. Choose a blade with approximately 18 teeth per inch (25 mm). Use a smooth, even stroke. Apply very little pressure.

Routing and shaping

ACRYLITE acrylic sheet can be machined with standard woodworking routers, in much the same way as wood. You'll find many uses for portable hand routers and small table routers. Use them to cut patterns into edges, or large holes out of pieces of ACRYLITE acrylic sheet.

For best results, use single-fluted bits for inside circle routing, and double-fluted bits for edge routing.

Routers are designed to operate at high speeds. 10,000 to 20,000 rpm is recommended for ACRYLITE acrylic sheet. And because routing speeds are so high, vibration must be scrupulously avoided. Even small vibrations can cause crazing and fractures in acrylic sheet during routing.

Turning

Turning is the only practical way to produce most round cross-sectioned parts such as knobs, furniture legs, and vases. ACRYLITE acrylic sheet can be turned on almost any type lathe.

Bits designed especially for cutting acrylic are available. But most high-speed tool bits with a zerodegree, or slightly negative rake will work very well. It is essential that rake be maintained at 0° to -4° for satisfactory results. Clearance angles should be from 5° to 10°. Use a turning speed approximately 10 times faster than for wood. You should be able to get a continuous chip from the ACRYLITE acrylic sheet.



Drilling

Any kind of hand or power drill may be used for drilling ACRYLITE acrylic sheet. A stationary drill press is the preferred tool because it gives better control and greater accuracy. But a drill press won't be applicable in all instances, and with a little care, proper technique, and a correctly-ground drill bit, you can get good results with an ordinary hand drill.

For best results, use drills designed specifically for acrylics. They are available from your ACRYLITE acrylic sheet Distributor. He can help you select the ones that are best for your job.

Regular twist drills can be used, but the cutting edges must be modified to prevent the blade from grabbing and fracturing the plastic. ACRYLITE acrylic sheet is relatively soft. Your drill should have an edge that cuts with a scraping action. To obtain this you can modify your drill bit by grinding small "flats" onto both cutting edges with a medium or fine-grit grinding wheel, or a pocket stone. The flats can be parallel to the length of the drill and about 1/32" (1 mm) wide. Tip angle should be between 60° and 90°. For the best possible finish inside the hole, use a drill with smooth, polished, slow-spiral flutes which will clear the hole of all shavings without marring or melting the walls.

If the drill is correctly sharpened and operated by proper speed, two continuous spiral chips or ribbons will emerge from the hole.

When drilling a hole three times deeper than the diameter of the drill, a lubricant or coolant should be used. This will help remove chips, dissipate heat, and improve the finish of the hole. Rough, irregular, or fuzzy holes can lead to cracking and breaking months after the piece has been completed.





"Flats" ground into the cutling edge will prevent a drill bit from grabbing.

Grind 1/32" (1 mm) flats with a fine-grit wheel.

Finishing Acylife

Scraping

Many of the techniques used to cut ACRYLITE acrylic sheet can leave a rough edge that is usually unsuitable either as a finished edge, or to join to another piece of acrylic. It is necessary to smooth and square the edge of the sheet. You can do this by a number of different techniques, depending on the finish desired.

The first step, and perhaps easiest technique, is scraping. A scraper can be almost any piece of metal



Edge scraping with the back of a hecksaw blade.

with a sharp, flat edge. The back of a hacksaw blade, the back of a knife blade, or a tool steel blank are ideal. Special acrylic scraping tools are also available from your ACRYLITE acrylic sheet distributor. Whatever tool you use must have a sharp, square edge.

Filing

It is easy to file ACRYLITE acrylic sheet to a surface ready for final polishing. The filing, however, must be done correctly, and carefully.

Almost any commercial file can be used. But the quality of the finish will depend on your choice of file coarseness. A 10 to 12 inch (250 to 300 mm) smoothcut file is recommended for filing edges, and removing tool marks. Other files—half round, rat tail, triangular files, and even small jewelers' files are good for smoothing insides of holes, cutting grooves and notches, or finishing detail. File in only one direction. Keep the teeth flat on the surface of the ACRYLITE acrylic sheet, but let the file slide at an angle to prevent the teeth from cutting unwanted grooves in your work.

Always keep your files clean and sharp. Wire brush them often to prevent the teeth from filling up. And don't use your acrylic files for working metal or other materials that might dull the teeth.

For small work, try clamping the file in a vise, and rubbing your work across the file.

Sanding


Before ACRYLITE acrylic sheet is ready to be polished, it should be sanded to a smooth, satiny finish. As with filing, the quality of the final finish will depend on the grades of sandpaper used. The finer the final grit, the smoother the finish. It will usually take at least three steps to get a good finish.

First, if there are scratches deep enough to require it, start with coarse grit No. 120 sandpaper. Use it wet. When the original scratches are completely removed, sand with a medium grit paper—220 is good—to remove the scratches from the coarse paper. Use the medium grit paper wet as well. Finally, sand to a satiny finish with a fine grit, wet-or-dry No. 400 paper. Fine grit paper should always be used wet to keep the paper from clogging and obtain a smoother finish. Rinse the paper frequently. Grits as fine as 600 may be used.

Always wipe your work clean when changing to a finer grit. Be sure all deep scratches have been removed.

Sanding by hand: Hand sanding ACRYLITE acrylic sheet is very much like hand sanding wood. Most of the same techniques apply. But sanding acrylic must be done with far greater care. You should always use a wooden or rubber sanding block.

When removing scratches, be sure to sand an area that is slightly larger than the scratch. This will help

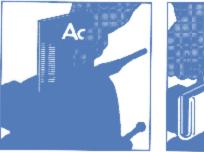



For small work, clamp the file in a vise and rub the place across it.

Slide the file at an angle to prevent cutling grooves into your work.

NOTE: ACRYLITE AR and ACRYLITE GAR abrasion resistant acrylic sheet should be sanded on the uncoated surface and / or edges only. Sanding will remove the abrasion resistant coating from the surface.

prevent low spots. Sand with a circular motion. Use light pressure and plenty of water with wet-or-dry papers.

As you get the feel of working with ACRYLITE acrylic sheet, your own observations and experience will be your best guide to determining how coarse a grade to start with on each particular job, and how many different grades will be needed to do the job most efficiently.

Don't be afraid to experiment with different sanding techniques and different types of blocks. You'll learn a lot of new tricks—perhaps the very one you'll need to help solve your next problem.

Sanding with power sanders: Almost any commercial power sander can be used to work ACRYLITE acrylic sheet. Naturally, different types of sanders are preferred for different operations. As a basic rule, use them as you do when sanding wood. They should, however, be operated with lower pressure, and at slower speeds. Experiment on scrap pieces. All wetor-dry machine sanding should be done wet—especially with grit sizes of 150 or finer.

Polishing

The original high luster of ACRYLITE acrylic sheet can be restored to the edges and surfaces by polishing

with a power driven buffer. It is also possible to polish ACRYLITE acrylic sheet by hand using a soft cloth and a very fine abrasive. But hand buffing is an extremely tedious process. You're likely to get a sore arm long before you get a finely polished surface. Power-driven buffing tools are recommended almost without exception.

Because inexpensive buffing wheels are available as an attachment for any electric drill, equipment should not be a problem.

Buffing wheels and compounds good for acrylics are sold by your ACRYLITE acrylic sheet distributor, but special wheels are not really necessary.



Acryline

Always use a buffing compound for polishing. Use it sparingly.

Edge polishing with a hand drill.

A good buffing wheel for ACRYLITE acrylic sheet will consist of layers of 3/16" (4.5 mm) carbonized felt, or layers of unbleached muslin laid together to form a wheel between 1 and 3 inches (25 and 75 mm) thick. The larger the wheel, the better. But don't use one too large for your equipment. The wheel should reach a surface speed of at least 1200 feet per minute (370 m per minute). Speeds up to 4000 feet per minute (1220 m per minute) are useful for acrylics.

Solidly stitched wheels with rows of concentric stitching should be avoided. They are often too hard and may burn the acrylic. Never use a wheel at speeds higher than its rpm rating.

Never use a wheel that has been used to polish metal. Traces of the metal may remain to scratch the ACRYLITE acrylic sheet.

ACRYLITE acrylic sheet should be polished using a commercial buffing compound of the type used for polishing softer metals such as silver or brass. Or you can use a non-silicone car polish that has no cleaning solvents in it.

First, however, tallow should be applied to the wheel as a base for the buffing compound. Just touch the tallow stick to the spinning wheel. Then quickly apply buffing compound.

To polish, move the piece back and forth across

the wheel until you get a smooth, even polish. Be careful not to apply too much pressure. And keep the work constantly moving across the wheel. This will help prevent heat buildup which can mar the surface by melting or smearing it.

For safety reasons, it is important not to start polishing near the top of the sheet. The wheel may easily catch the top edge, tearing the piece of ACRYLITE acrylic sheet out of your hands and throwing it across the room . . . or at you. Always wear safety glasses and be extremely careful.

Begin polishing approximately one-third of the way down the sheet, and keep moving it back and forth until you've reached the bottom edge. Then turn the sheet around and repeat the process on the other half.



Do not start at top of piece when polishing surface.

Forming Acrylite

ACRYLITE acrylic sheet becomes soft and pliable when heated—behaving almost like a sheet of flexible rubber. It may then be formed into almost any shape. As the sheet cools, it hardens and retains the formed shape, provided it has been held in place during the cooling process.

The only functional difference between ACRYLITE GP and ACRYLITE FF acrylic sheet is the temperature ranges in which they are pliable. Do not exceed them. Excessively high temperatures may cause the sheets to blister and burn. ACRYLITE FF acrylic sheet will give better definition in tight radii or deep draws.

ACRYLITE GP acrylic sheet should be heated to between 340° and 380°F (171° and 193°C).

ACRYLITE FF acrylic sheet should be heated to between 290° and 320°F (145° and 160°C).

Line bending or thermoforming ACRYLITE AR and ACRYLITE GAR abrasion resistant acrylic sheet is not recommended. Cold forming is possible. To calculate the minimum radius of curvature, multiply the thickness of the sheet to be used by 330. Tighter radii may result in crazing or cracking of the coating.

Never heat ACRYLITE acrylic sheet in a kitchen oven. Acrylic sheet gives off highly flammable fumes when decomposed by overheating. These gases are potentially explosive if allowed to collect in an unventilated area.

Most kitchens ovens do not have accurate temperature control. Temperatures can be off as much as 75° (42°C), possibly allowing the acrylic to overheat.

And because air is not forcibly circulated in a standard kitchen oven, the fumes will accumulate. When they come into contact with the heat source, there is likely to be an explosion. Repeat: **Do not** heat acrylic in a kitchen oven.

Forming with a strip heater

A strip heater is without doubt the most useful acrylic-forming device in the home craftsman's arsenal.

Used properly, it is perfectly safe. A correctly assembled strip heater will not exceed safe heat.

Unfortunately, a strip heater can only be used to form straight-line bends; but that is usually all that's necessary for most home projects. It will allow you to make those bends with a minimum of trouble—and a minimum of electricity.


A strip heater heats only the area to be formed there's no need to heat the entire sheet if you only intend to make a straight-line bend. It heats quickly. And with a little care you'll get excellent results, because the rest of the piece stays cool.

Strip heater kits with complete instructions are available from your ACRYLITE acrylic sheet distributor.

Heating and forming ACRYLITE acrylic sheet with a strip heater is not difficult. When properly heated, the acrylic may be easily bent into smooth, clean corners. With patience and a little practice you should soon be able to achieve excellent results.

First, remove the masking paper from the line of the bend. The rest of the masking paper should be left in place to protect the unheated area. Then lay the sheet on the heater with the bend line directly above the exposed heating element so that the bend will be made **away** from the heated side. The length of heating time will vary according to the thickness of the sheet. ACRYLITE acrylic sheet thicker than 3/16" (4.5 mm) should be heated on both sides for a proper bend. Heat the sheet until it begins to sag at the bend line. Don't try to bend the sheet before it is fully heated, or after it has partially cooled. This will result in irregular and creased corners and high internal stress.

Forming jigs and clamps should be used for best results. They can be made of wood and used over and

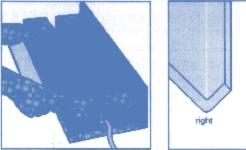

right wrong (insufficient heating)

Heating acrylic sheet with a strip heater.

Correct and incorrect bencs.

over. Make preformed jigs for certain angles, or even special shapes for individual projects. Variable angle jigs can be made with two pieces of wood hinged together and held at the desired angle with a variable brace, as shown. Felt, flannel, or flocked rubber should be used to line any surfaces that may come into contact with the heated acrylic. Wear heavy cotton gloves when handling heated ACRYLITE acrylic sheet. They'll protect your hands, as well as the sheet.



Hinged, variable-angle jig.



Right-angle forming with material taped in place.

Other forming techniques

ACRYLITE acrylic sheet may be formed into almost any shape. However, specialized heating and forming equipment is usually required for all but the simplest projects. Furthermore, while many of the forms and jigs required for two and three dimensional forming can be easily made out of wood in the home shop, such projects are beyond the scope of this booklet. Many excellent books are available covering all types of acrylic forming. They deal with techniques such as drape forming, plug and ring forming, surface molding, blow and vacuum forming, and even design, construction, and use of ovens for heating acrylic sheet. Your ACRYLITE acrylic sheet distributor should have a selection of these books, and can recommend one that will suit your needs.

Joining Acrylics

ACRYLITE acrylic sheet can be joined with solvent cements to form strong, durable, transparent joints.

ACRYLITE AR and ACRYLITE GAR acrylic sheet can be cemented on the non-coated sheet surfaces using the same procedures as ACRYLITE FF and ACRYLITE GP acrylic sheet. If solvent cementing on or to a coated surface is necessary, the coating must first be removed by wet sanding with 500 grit, or finer, sandpaper.

The ingredients in most solvent cements are hazardous materials, and extreme care should be observed using proper ventilation and handling techniques as recommended by the manufacturer of these products. Always follow the manufacturer's recommendations and instructions when using these and any other products.

The ultimate strength and appearance of your joints will depend on how carefully you make them. Getting really good joints requires a lot of care, and considerable skill. Practice on scrap pieces. The more experience you have, the better your work will be.

Observe some basic precautions when working with acrylic solvents:

- Always work in a well-ventilated area.
- Do not smoke—solvents are highly volatile and flammable.
- Protect skin from contact with cement.
- Do not attempt to cement ACRYLITE acrylic sheet in temperatures under 60°F (15°C). Temperatures from 70° to 75°F (21° to 24°C) are ideal.
- Always follow the cement manufacturer's recommendations.

Preparation of the joint

All surfaces that are to be joined should fit together accurately without having to be forced. Flat, straight surfaces are easiest to work with. Any area that is part of the original surface of the sheet should be left untouched. A smooth cut made with a cooled power saw also should be left alone. However, if the area to be joined has a saw cut that is rough, it should be wet sanded or finished with a router to get a flat, square edge. Do not polish edges that are to be cemented. Polishing leaves a highly stressed, convex edge with rounded corners. It will make a very poor joint. Always remove the masking from around the area to be joined.

Capillary cementing

Capillary cementing is probably the most popular method of joining ACRYLITE acrylic sheet. It works because of the ability of a low-viscosity solvent-type cement to flow through a joint area by capillary action. Properly done, it yields strong, perfectly transparent joints; however, it won't work at all if the parts do not fit together perfectly.

Solvent cements are available from your ACRYLITE acrylic sheet distributor who can recommend the ones that are best for your particular projects. First make sure the parts fit together properly. Then hold the pieces together using a jig that will support the pieces firmly but will permit slight movement as the joint drys.

It is important that the joint be kept in a horizontal plane, or the cement will run out of the joint.

Apply the cement carefully along the entire joint. Apply it from the inside edge, whenever possible on a







Soak cementing. Material must be supported on pins or wire brads. See page 20.

box-corner type joint, and from both sides, if possible, on a flat piece. A special needle-nozzled applicator bottle available from your ACRYLITE acrylic sheet Distributor is recommended.

If the cement does not flow completely into the joint, try tilting the vertical piece very slightly (about 1°) towards the outside. This should allow the solvent to flow freely into the entire joint.

Always let the joint dry thoroughly (usually 10-30 min.) before moving the part. Maximum bond strength will not be reached for 24 to 48 hours.

Dip or soak cementing

This method of cementing ACRYLITE acrylic sheet involves dipping the edge of one of the pieces to be joined directly into the solvent. It is very important that only the very edge be dipped. Exposing too much area to the solvent will result in a weak, slow-setting joint.

You'll need a shallow tray in which to dip the acrylic. The tray can be made of aluminum, stainless steel, galvanized steel, or glass. Do not use plastic—the solvent may dissolve it.

Place short pieces of wire, pins, or brads into the tray to keep the edge of the ACRYLITE acrylic sheet from touching the bottom of the tray. The tray must be level. Pour solvent cement into the tray so that it just covers all the brads—and covers them evenly.

Now carefully place the edge to be cemented into the tray so that it rests on the brads. You can hold the piece upright by hand, but it is better to use some kind of support to hold the piece in place while it soaks. A couple of padded clamps attached to the sheet, and resting on the edge of the tray are fine. Heavy pieces of wood placed against each side of the sheet will also work. Slotted wooden supports are usually used for production work, but anything that will hold the piece firmly upright is sufficient.

The ACRYLITE acrylic sheet should be left in the solvent from 1/2 to 2 minutes, depending on the thickness of the sheet, the type of solvent used, and the bond strength required. Soaking time should be long enough to allow the edge of the sheet to swell into a "cushion." As soon as an adequate cushion is formed, the piece must be removed. Hold it for a few

seconds at a slight angle to allow the excess solvent to drain off. Then carefully, but quickly, place the soaked edge precisely into place on the other part to be joined. Hold the parts together for about 30 seconds without applying any pressure. This will allow the solvent to work on the surface of the other piece.

After 30 seconds you can apply some pressure to squeeze out any air bubbles. But be very careful not to squeeze out the cement.

When the pieces are joined, the part should be placed in a jig to maintain firm contact for 10 to 30 minutes. Do not allow the parts to move during this critical time.

Allow the joint to set for another 8 to 24 hours before doing any further work on it.

Viscous cementing

Viscous cements are used to cement joints that can't be easily cemented by capillary or solvent soak methods—either because they are difficult to reach, or because the parts don't fit properly together. Viscous cement is thick. It will fill small gaps, and can make strong, transparent joints where solvent cements can't.

Viscous cements are available from your ACRYLITE acrylic sheet distributor. Or you can make your own viscous cement by dissolving chips of clear ACRYLITE acrylic sheet in a small amount of solvent. Let the solution stand overnight.

Apply the cement like glue with a brush, spatula, or directly from the applicator tube.

Remove the masking material from around the joint area, and carefully apply a small bead of cement to one side of the joint. Then gently join the pieces as described under "Soak Cementing."

Masking tape may be applied to protect the area around the joint, but it should be removed carefully after about 5 minutes, while the cement is still wet. Don't touch the parts at all for the first critical 3 minutes, or the joint will not hold. The part may be carefully moved after 30 minutes, but don't do any additional work on it for 12 to 24 hours.

Glazing with Acrylic Site

One of the most popular uses for ACRYLITE acrylic sheet is as a replacement for window glass. ACRYLITE acrylic sheet is lighter, more transparent, and far more break resistant than glass. Glazing with ACRYLITE acrylic sheet is safe and easy.

Important: ACRYLITE acrylic sheet expands and contracts at a much greater rate than glass. To compensate, remember to allow approximately 1/16" per running foot (.52 cm per running meter) shorter than your frame size.

The sheet thickness you need depends on the size of your window. Use the chart on page 23 to determine the proper thickness for each application.

For windows smaller than 24" (600 mm), use an elastic glazing compound which is compatible with acrylic sheet. Your ACRYLITE acrylic sheet distributor can recommend one.

For windows over 24" (600 mm), it is important that you select the proper rabbet depth to allow for expansion and contraction.


Use a continuous removable stop, and caulk with a polysulfide sealant or butyl tape.

If it is necessary to bolt a small panel [less than 24" x 24" (600 x 600 mm)] to a frame, drill mounting

holes larger than the diameter of the bolts or screws. Use round-head screws, with rubber washers against the ACRYLITE acrylic sheet, and stainless steel washers against the screw head. After tightening, back off 1/2 turn.

Do not use counter-sunk, flat-head screws. They will fracture the acrylic sheet.


Your ACRYLITE acrylic sheet distributor can supply any glazing materials—and any additional information you may need to do the job right with ACRYLITE acrylic sheet.

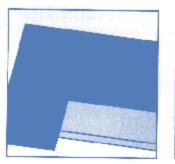



Proper rabbet depth and room for expansion.

Details for boiling small sheet to a frame.

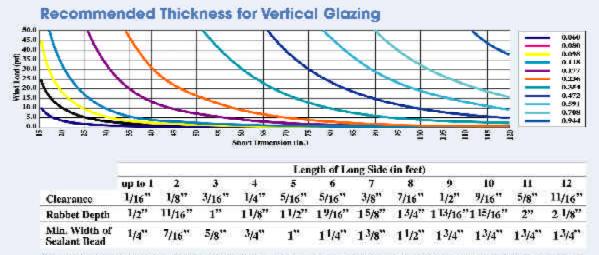

¹⁴ Assumptions: Glazing is installed at 60P with temperatures ranging from -20 to 120P. Glazing is installed in accordance with CYRO recommended thicknesses and clearances. Sealant with 50% movement capability is used.

Fire precautions

ACRYLITE GP and ACRYLITE FF acrylic sheet are combustible thermoplastics. Precautions should be taken to protect these materials from flames and high heat sources. ACRYLITE GP and ACRYLITE FF acrylic sheet usually burns rapidly to completion if not extinguished. The products of combustion, if sufficient air is present, are carbon dioxide and water. However, in many fires sufficient air will not be available and toxic carbon monoxide will be formed, as it will when other common combustible materials are burned. We urge good judgement in the use of these versatile materials and recommend that building codes be followed carefully to assure they are used properly. Contact CYRO Industries for further information.

Compatibility

Like other plastic materials, ACRYLITE sheet is subject to crazing, cracking, or discoloration if brought into contact with incompatible materials. These materials may include cleaners, polishes, adhesives, sealants, gasketing or packaging materials, cutting emulsions, etc. Contact your ACRYLITE Sheet Distributor or the CYRO Technical Center at 25 Executive Blvd., Orange, CT 06477, or call 203-795-6081 for information on a specific product. In Canada, contact CYRO Canada, 6285 Northam Drive, Suite 100, Mississauga, Ontario, L4V 1X5; 905-677-1388, or 800-268-4743.

Important notice: The information and statements herein are believed to be reliable but are not to be construed as a warranty or representation for which we assume legal responsibility. Users should undertake sufficient verification and testing to determine the suitability for their own particular purpose of any information or products referred to herein. No warranty of fitness for a particular purpose is made.

Nothing herein is to be taken as permission, inducement or recommendation to practice any patented invention without a license.





CYRO Industries Rockaway, NJ 07866

AUTHORIZED DISTRIBUTOR: